



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH II
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HER MAJESTY QUEEN ELIZABETH
THE QUEEN MOTHER
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY



BY APPOINTMENT TO
HIS ROYAL HIGHNESS THE PRINCE OF WALES
MANUFACTURERS OF DAIMLER AND JAGUAR CARS
JAGUAR CARS LIMITED COVENTRY

S-TYPE

OWNER'S HANDBOOK

Publication Part No. **JJM 10 02 16 502**

Published December 2004 by Technical Communications, **Jaguar Cars Limited**

JAGUAR CARS LIMITED, as manufacturer, is dedicated to the design and production of vehicles which meet the expectations of the world's most discerning purchasers.

This handbook forms part of the owner literature supplied with your vehicle. It is designed to complement the relevant features and systems of the vehicle, and make them easy to understand and operate.

The information contained in this handbook applies to a range of vehicles and not to a specific vehicle. For the specification of a particular vehicle, owners should consult their Jaguar Dealer/Authorised Repairer.

The manufacturer reserves the right to vary its specifications with or without notice, and at such times and in such manner as it thinks fit. Major as well as minor changes may be involved in accordance with the manufacturer's policy of constant product improvement.

To cover changes, it is sometimes necessary to issue one or more handbook supplements. When reading this handbook, check the owner literature for possible supplements.

For full details of the owner literature originally supplied with the vehicle, owners should consult their Jaguar Dealer/Authorised Repairer.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form, electronic, mechanical, photocopying, recording or other means without prior written permission from the Service Division of Jaguar Cars Limited.



This book is printed on paper that originates from sustainable forests, is recyclable, bio-degradable and acid-free. The wood pulp is chlorine-free and the effluent water is purified before being discharged.

Handbook Contents

Quick Overview	
Quick Overview	7
Filling Station Information	17
Owner Information	
General Information	23
Health and Safety	29
Security and Locks	
Ignition Switch	33
Vehicle Security	34
Door Locks	37
Luggage Compartment Locks	42
Alarm Systems	43
Garage Door Opener	46
Before Driving	
Occupant Protection	55
Child Safety	67
Seats	75
Clock	80
Steering Column	81
Pedal Controls	83
Door Windows	84
Mirrors	86
Driving Position Memory	88
Luggage Compartment	90
On the Road	
Instruments	95
Warning Lights	97
Audible Warnings	101
Message Centre	102
Trip Computer	108
Cruise (Speed) Control	111
Adaptive Cruise Control	113
Exterior Lighting	119
Interior Lighting	125
Parking Assist	126
Horn	128
Sunroof	129
Wipers and Washers	130
Parkbrake	132
Interior Features	134
Engine Starting	137
Transmission	140
Braking System	143
Stability Control	145
Driving Information	146
Fuel and Refuelling	151
Climate Control	
Climate Control	159
Automatic Climate Control	162
Roadside Emergency	
Inertia Switch	169
Emergency Starting	170
Wheel Changing	172
Vehicle Recovery	176
Bulb Renewal	179
Fuses	184
Fire Extinguisher	194
Maintenance	
General Maintenance	197
Bonnet Release	198
Regular Checks	199
Checking and Top-up	203
Battery	209
Wiper Blades	213
Tyres	214
Vehicle Care	218
Electrical Accessories	221
Specifications	
Engine Data	225
Dimensions	226
Weights	227
Load Weights	228
Wheels and Tyres	229
Fuel Consumption	230

A comprehensive index is located at the back of this handbook.




Quick Overview

Quick Overview

Warning Lights	7
Fascia Controls	8
Centre Console	9
Overhead Console	10
Setting a Driving Position	10
Seat Adjustment	10
Steering Column Adjustment	11
Pedal Adjustment	11
Door Mirror Adjustment	12
Window Operation	12
Setting Memory	12
Exterior Lights - Autolamps	12
Occupancy Sensing	13
Parkbrake	13
Wipers and Washers	14
Trip Computer	14
Climate Control	15
Audio System	16

Filling Station Information


Fuel Type	17
Fuel Filling	17
Bonnet Release	18
Underbonnet Top-up	18
Tyre Pressures	19

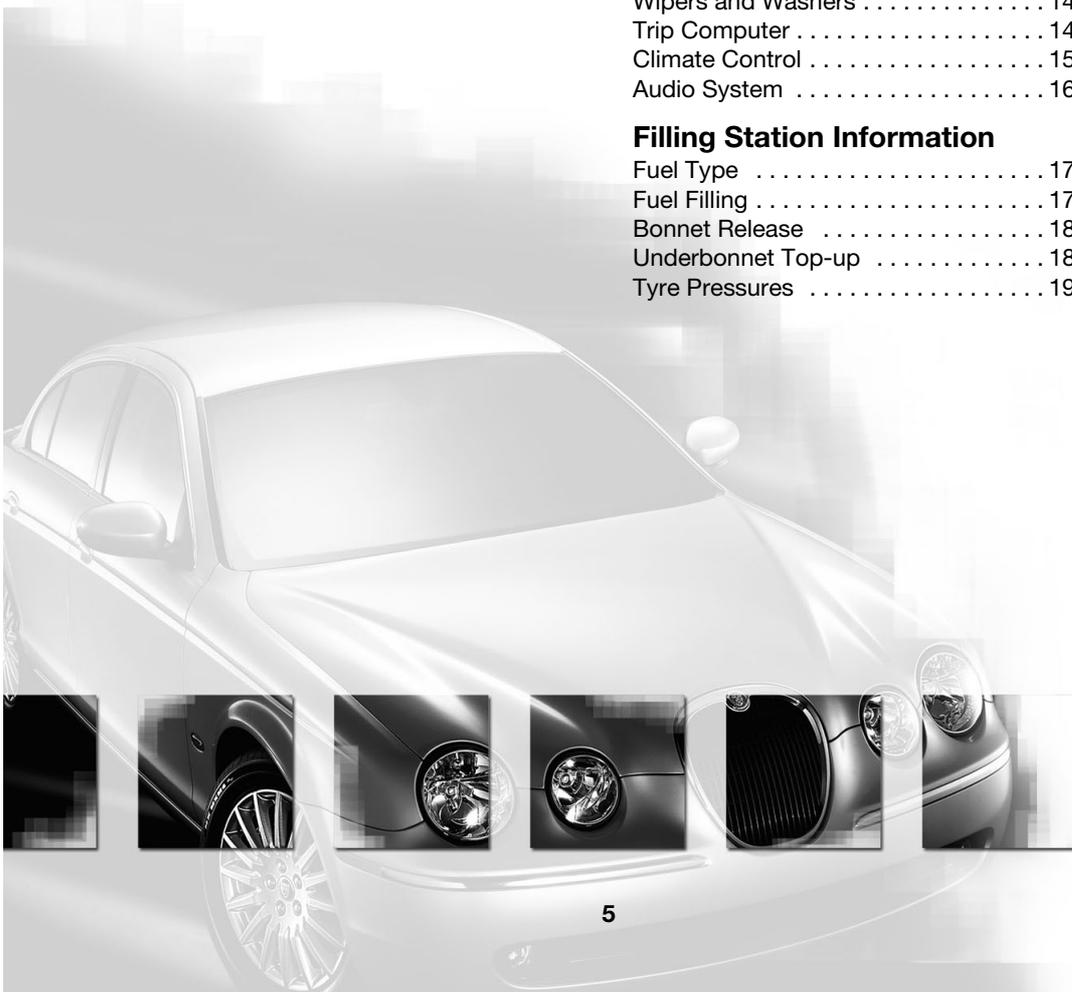



Quick Overview

Warning Lights

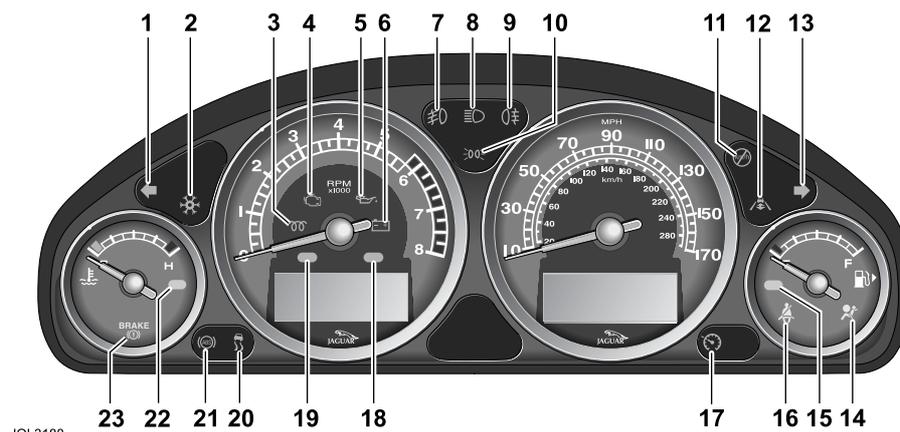


JOL3188

- | | |
|------------------------------------|--------------------------------------|
| 1. Left-hand indicator. | 14. Airbag. |
| 2. Low outside temperature. | 15. Low fuel level. |
| 3. Glow plug (diesel only). | 16. Seat belt. |
| 4. Engine malfunction. | 17. Cruise control active. |
| 5. Low oil pressure. | 18. Priority indicator (Red). |
| 6. Battery charge indicator. | 19. Priority indicator (Amber). |
| 7. Front fog lights. | 20. Dynamic stability control (DSC). |
| 8. Main beam. | 21. Anti-lock braking system (ABS). |
| 9. Rear fog lights. | 22. High engine temperature. |
| 10. Side (parking) lights. | 23. Parkbrake on/brake fluid low. |
| 11. Overspeed warning (Gulf only). | |
| 12. Adaptive cruise control. | |
| 13. Right-hand indicator. | |
- For detailed information about instruments and warning lights, refer to pages 95 and 97 of this handbook.

Quick Overview

Fascia Controls

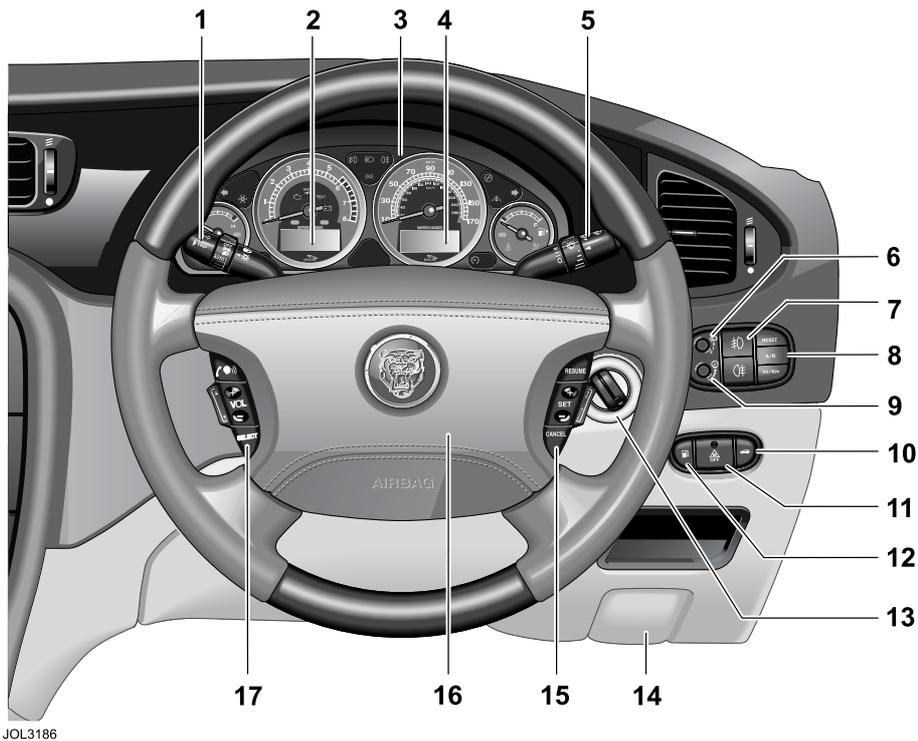


JOL3186

- | | |
|--|---|
| 1. External lights switch (119). | 12. Fuel filler flap release switch (151). |
| 2. Message centre (tachometer) (102). | 13. Ignition switch (33). |
| 3. Instrument panel (95). | 14. Bonnet release lever (198). |
| 4. Message centre (speedometer) (102). | 15. Cruise control or adaptive cruise control (if fitted) switches (111). |
| 5. Wiper/washer switches (130). | 16. Driver's airbag/Horn (128). |
| 6. Headlight levelling switch (122). | 17. Audio switches (see audio systems handbook). |
| 7. Fog lights (121). | |
| 8. Trip computer (108). | |
| 9. Dimmer switch (122). | |
| 10. Luggage compartment release switch (42). | |
| 11. Forward alert switch (117). | |

Page numbers (shown in brackets) refer to pages in this handbook that have further relevant information.

Quick Overview

Centre Console

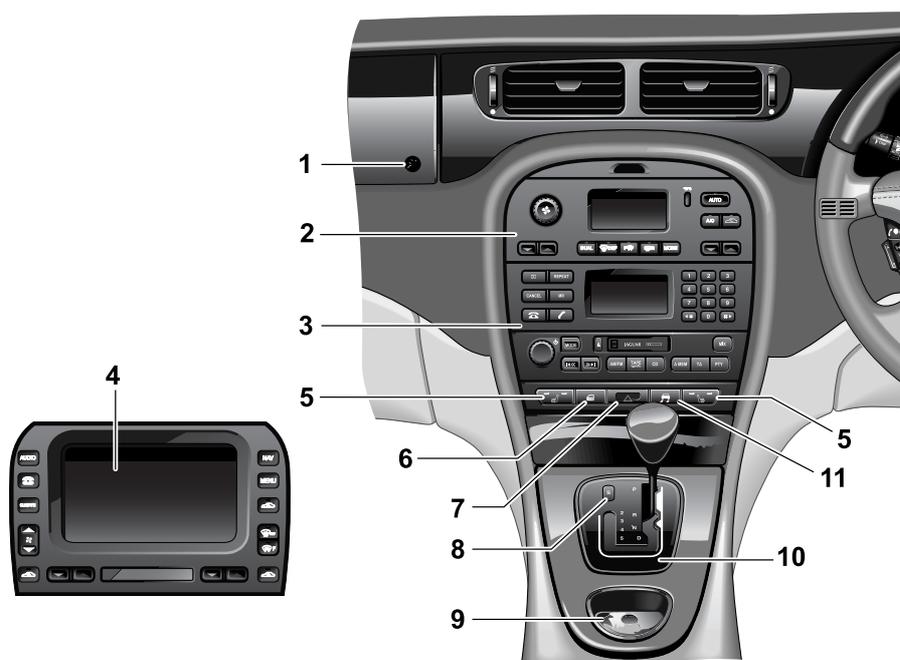


JOL2988

1. Airbag OFF indicator light (66).
2. Climate control panel (162).
3. Audio panel (see audio systems handbook).
4. Navigation Screen, if fitted (see touch-screen display handbook).
5. Front seat heaters (79).
6. Door locking switch (39).
7. Hazard warning switch (124).
8. Sport mode switch (141).
9. Parkbrake (132).
10. Gear selector (140).
11. Dynamic stability control switch (145).

Page numbers (shown in brackets) refer to pages in this handbook that have further relevant information.

Quick Overview

Overhead Console

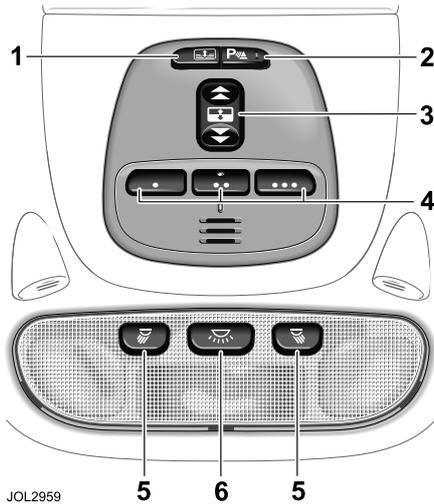


JOL2959

1. Rear sunblind.
2. Front and rear park distance control.
3. Sunroof.
4. Garage door opener.
5. Reading/map lights.
6. Front and rear courtesy lights.

Setting a Driving Position

It is advisable to first move the driver's seat to the correct position in relation to the pedals, gear selector and the front and side vision before adjusting the steering column, mirrors and seat belt.

Seat Adjustment

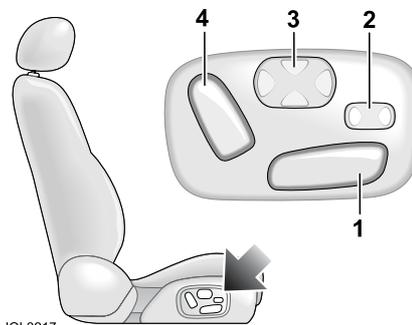


JOL3217

1. Adjusts the seat fore and aft position and cushion height and front tilt.
2. Adjusts the seat cushion extension (if fitted).
3. Controls the lumbar support in the lower backrest.
4. Adjusts the seat back angle (recline) and headrest height.

For more information on front and rear seat operation, see page 75.

Quick Overview

Steering Column Adjustment

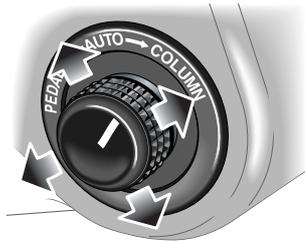



JOL3215

Rotate the switch on the left-hand side of the steering column to **COLUMN** (or **AUTO**) and move the switch to adjust the steering column until a comfortable position is obtained.

For entry/exit mode rotate the switch to **AUTO**. This will not activate if **PEDALS** or **COLUMN** is selected.

For full details on how to adjust the steering column, see page 81.

Pedal Adjustment (Where fitted)

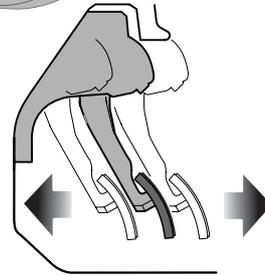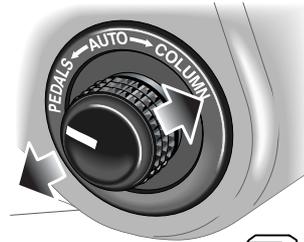

JOL2962

Select **PEDALS** and move the switch fore and aft until a comfortable position is obtained.

Note: Any adjustment to the pedals is inhibited when cruise control is activated.

For information on pedal adjustment, see page 83.

Quick Overview

Door Mirror Adjustment




JOL3200

1. Adjusts the exterior mirrors.
2. Selects left or right-hand door mirror.

Power foldback (Where fitted): Set button (2) to the centre position, briefly press the rear of button (1). To return the mirrors to their normal driving position briefly press the rear of button (1) again.

For more information on door mirrors, see page 86.

Window Operation

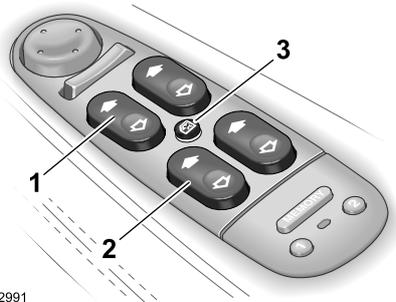


JOL2991

1. Opens/closes front windows.
2. Opens/closes rear windows.
3. Isolates operation of rear windows.

For more information on window operation, see page 84.


Setting Memory (Where fitted)

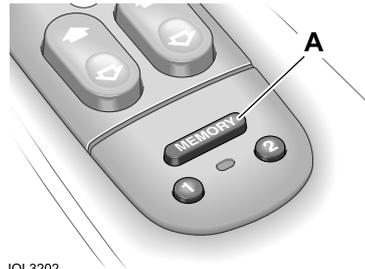

JOL3202

- Adjust your seat, steering column and exterior mirrors to your preferred position.
- Press **MEMORY (A)** and the red tell-tale will illuminate for 5 seconds.
- Press either **1** or **2** to store into the desired memory location while the LED is illuminated. A short acceptance tone is given.

Exterior Lights - Autolamps

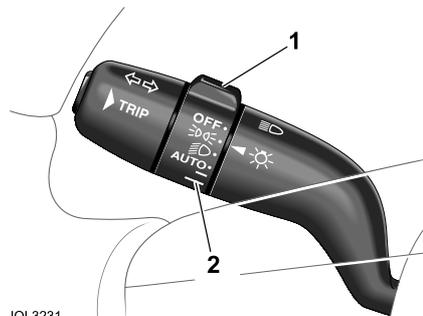


JOL3231

For AUTOLAMPS function rotate the rotary collar (1) to **AUTO (2)**.

For more information about exterior lighting, see page 120.

Quick Overview

Occupancy Sensing

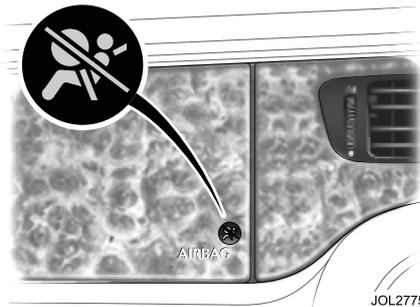

JOL2775

The front passenger seat is equipped with a sensor that determines the occupancy status by measuring the weight on the cushion and changes the passenger airbag deployment status.

An indicator light is located on the passenger fascia and illuminates a symbol denoting passenger airbag deactivation.

- Seat with low weight occupant/object - airbag deactivated - indicator light **ON**.
- Seat with heavy occupant/object - airbag activated - indicator light **OFF**.
- * Seat completely empty - airbag deactivated - indicator light **OFF**.

* It is possible to receive an intermittent indicator light with an empty seat condition. This is part of the system adaptive behaviour and does not affect the status of the passenger airbag deployment.

However, if the indicator light becomes permanently illuminated when the seat is definitely empty, then consult your nearest Jaguar Dealer/ Authorised Repairer immediately.

Parkbrake



JOL2992

To apply parkbrake: Pull the parkbrake switch up and release. The warning light in the instrument cluster will illuminate.



JOL2993

To release parkbrake: The ignition switch must be in position 'II', apply the footbrake and push the parkbrake switch down.

Note: *The parkbrake automatically applies when the ignition key is removed.*

Auto transmission

The parkbrake is automatically released when the gear selector is moved from 'P' or by pressing the accelerator pedal when in gear.


Manual transmission

The parkbrake is only released via the parkbrake switch or by driving the vehicle away with the accelerator depressed.

For full operating details, see page 132.

Quick Overview

Wipers and Washers

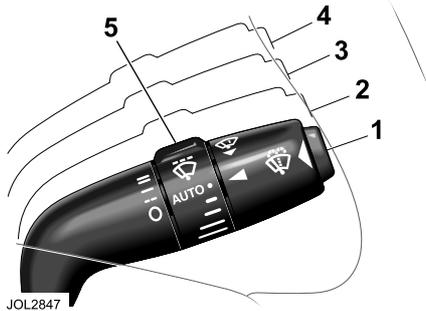

1. Wipers OFF.
2. Intermittent wipe.
3. Normal wiper operation.
4. High speed wiper operation.
5. Intermittent delay collar - rotate to vary the wipe delay and AUTO (rain sensitive wiper operation).

Note: If the wipers are switched on in **AUTO** for more than 20 seconds and **AUTOLAMPS** has been selected, then the exterior lights will be switched on.


Caution: Ensure that **AUTO** is not selected when entering a car wash or damage to the wiper blades/arms can occur.

Flick wipe - pull towards the steering wheel.

Wash/wipe - push the button on the end of the column switch.

For full details on how to operate the wipers/washers, see page 130.

Trip Computer

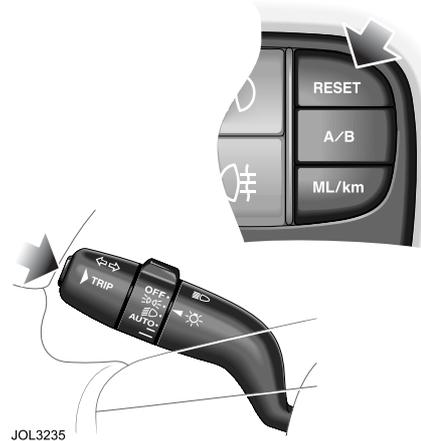

To reset

Press and hold the **RESET** button for three seconds.

To display

Press the **TRIP** button on the end of the left column stalk switch to cycle through the display data.

Note: Messages can be hidden by one press of the **RESET** button.

Quick Overview

Climate Control



JOL2749

1. Push for system ON/OFF, rotate for manual blower speed.
2. Air conditioning.
3. Automatic operation.
4. Heated rear screen.
5. Heated front screen (if fitted).
6. Defrost.

It is normal for puddles of liquid to occur under the vehicle, particularly in hot/humid conditions.

For full details of climate control, see page 159.

For optimum comfort and system operation:

- Optimum temperature control and comfort is achieved by selecting **AUTO**.
- Operate with **A/C** on throughout the year to reduce the risk of misting.
- A/C operates automatically in **DEF** and partial screen modes to maximise screen clearance. **A/C** cannot be switched off in **DEF**.
- Recirculation is automatically cancelled in **DEF** and in partial screen modes as it contributes to misting. Recirculation cannot be selected in **DEF**.

Quick Overview

Audio System



JOL2750

1. ON/OFF switch and volume control.
2. Seek AM/FM station, seek tape or cue/rewind CD.
3. AM/FM radio waveband select.
4. Select cassette tape play when in other audio mode. Change tape side when a tape is playing.
5. Select CD changer.
6. Pre-set buttons and phone key pad.
7. Phone mode.
8. Cassette tape eject.
9. MiniDisc eject.
10. Select CD changer.
11. Select MiniDisc play when in other audio mode.
12. CD eject.
13. Select CD changer.
14. Select CD play when in other audio mode.

For all other options and functions, see the audio systems handbook.

Filling Station Information

Fuel Type

Petrol models - Unleaded 95 RON.

Diesel models - Diesel fuel to EN 590 or equivalent.

Caution: DIESEL ENGINES - If you inadvertently fill your vehicle with petrol instead of diesel, do not attempt to start the engine.

Contact your Jaguar Dealer/ Authorised Repairer immediately. Attempting to start the engine with petrol in the fuel tank will cause extensive damage to the engine and fuel system, which will not be covered by your Jaguar warranty. Jaguar can accept no responsibility for any damage caused by running your vehicle with petrol or vegetable oil in the fuel tank.

Diesel engines only: Driver's should expect above normal fuel consumption when the engine is new and 'bedding-in'. After a period, the fuel consumption will gradually improve to expected fuel consumption levels.

Caution: Do not use RME (bio-diesel) except in the case of proprietary diesel fuels which contain a mix of up to 5%.


Note: Vehicles with a diesel engine have a **yellow** filler cap.

Fuel Filling



JOL2751

Press the fuel filler flap release. This is located on the driver's knee bolster switch below the fascia, see page 151.

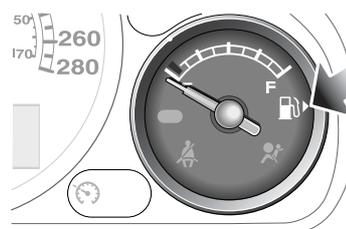

JOL3284

The filler flap is located on the right-hand side of the vehicle.


For quickness and to completely fill the tank, ensure that the fuel nozzle rests on the bottom of the filler neck.

Incorrect closure of the fuel filler cap may result in check engine light (malfunction indicator light) illuminating.

After refuelling, refit the fuel filler cap in the filler neck, twist the filler cap clockwise until it clicks and close the flap, which automatically locks shut.

Filling Station Information

Bonnet Release

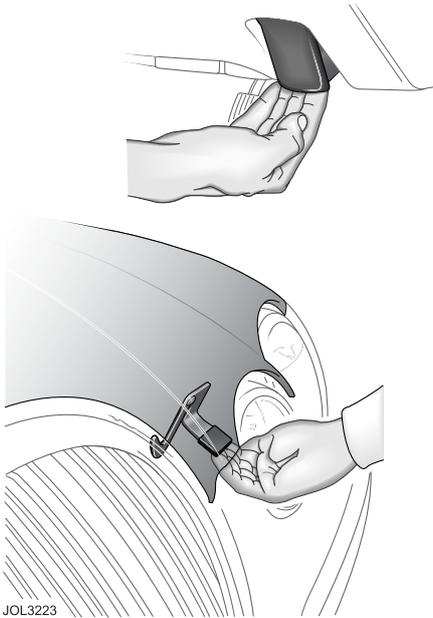

Pull the release lever located below the fascia on the driver's side of the vehicle (see page 198).

Underbonnet Top-up

Recommended Engine Oil.

See page 204.

Petrol models -

Castrol 5W-30 to Jaguar specification WSS M2C913 - A or B.

Diesel models -

An oil of 5W-30 viscosity to Jaguar specification WSS M2C913 - B must be used in all vehicles with a diesel engine.

For **top-up purposes only**, where the WSS M2C913 - B specification cannot be found, ACEA B1 or ACEA B3 specification oils may be used.

Windscreen/Headlight Washer Reservoir.


See page 208.

Coolant System

50% water/50% anti-freeze, see page 205.

Filling Station Information

Tyre Pressures

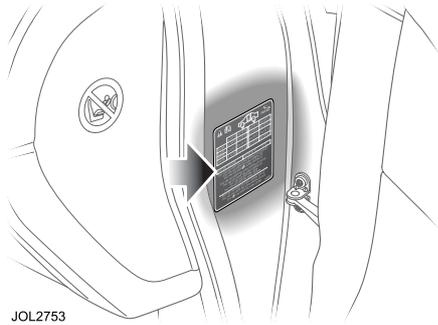

The tyre pressures for all normal operating conditions are shown on a label fixed to the inside of the driver's door front pillar.

Check pressures when the tyres are cold (see page 214). Deflating air from a warm tyre to the recommended pressure will result in under inflation which may be dangerous.

For your convenience you may wish to record the tyre pressures in the boxes provided below. If you are unsure of the correct pressures, please contact your Jaguar Dealer/Authorised Repairer.

	FRONT
Normal Driving	<input type="text"/>
Laden/High Speed	<input type="text"/>
Spare Wheel	<input type="text"/>
	REAR
Normal Driving	<input type="text"/>
Laden/High Speed	<input type="text"/>
Spare Wheel	<input type="text"/>



WARNING:

When using tyres other than those recommended by Jaguar, do not exceed the speed capacity recommended by the manufacturer.

L

Owner Information

General Information

Introduction	23
Jaguar Dealers/Authorised Repairers	23
Warnings, Cautions and Notes	24
Vehicle Handbooks	24
Regular Servicing	24
Jaguar Diagnostic System	24
Vehicle Identification	25
Floor Mat Retention	25
Protect the Environment	25
Leather Care Guide	26
On-board Event Data	27
Window Tinting	27
Mobile/Portable Telephones	28

Health and Safety

Health and Safety	29
-------------------------	----



